Start Here

Unpack Your DVD+VCR

- DVD+VCR
- Remote control
- 1.5V AA batteries (2)
- Coaxial cable
- Audio/video cable
- User's guide
- Read Me First/ Quick Reference Guide
- Warranty registration card

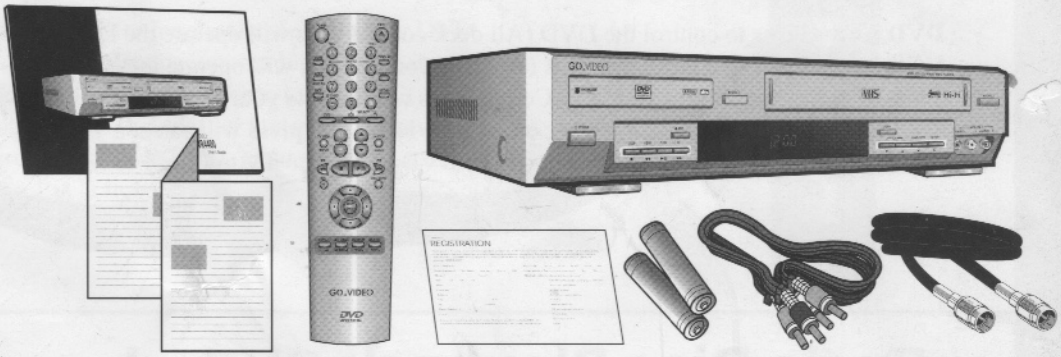

Audio/Video Cable

Coaxial Cable

Insert Batteries

1 Remove battery cover.
2 Insert two 1.5V AA batteries, paying attention to the correct polarities (+/–).
3 Replace cover.

:: Basic Connections

The following connections are required in order to operate your DVD+VCR:

1 **Connect Antenna to DVD+VCR** Connect the coaxial cable from your antenna or cable TV jack to the IN (FROM ANT.) jack on the DVD+VCR back panel.

2 **Connect DVD+VCR to TV** Choose either RF Out or Line Out:

a. RF Out Use if you have an older television with only a basic antenna input: Connect the supplied coaxial cable from the OUT (TO TV) jack on the DVD+VCR back panel to the antenna in jack on your television.

b. Line Out Use for better sound and picture quality if your television has audio/video inputs: Connect the supplied audio/ video cable from the LINE OUT jacks on the DVD+VCR back panel to the line in jacks on your television.

3 **Power on DVD+VCR & TV** Plug the DVD+VCR power cord into a standard 120V/60Hz wall outlet, and turn on your television and DVD+VCR.

4 **Select Channel 3 or Line** If you used the RF Out connection, tune your television to channel 3. If you used the Line Out connection, set your television to its Line or Aux input

Note

- *The Language/Langue/Idioma menu should appear on your television screen. Please proceed with Auto Setup.*
- *In order to view the setup menus, you MUST connect the DVD+VCR to your television with the RF or Line Out connections, even if you plan to use the S-Video or Component Video outputs.*
- *If you are not getting a good picture, try changing the RF Output to channel 4; see the User's Guide for details.*

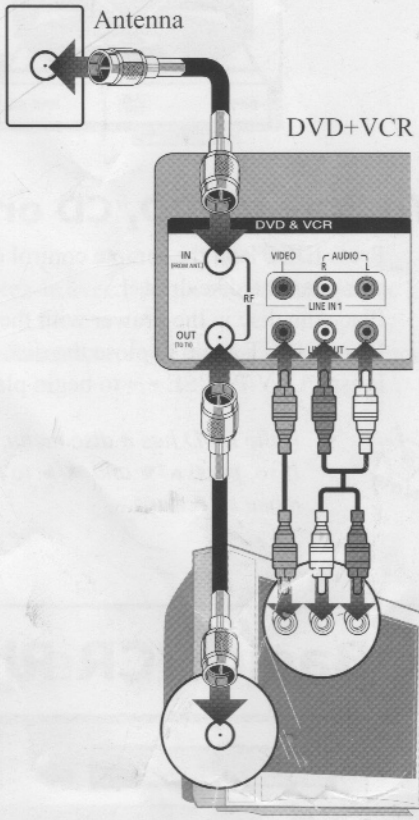

STEREO

Hi-Fi

Note

- *CD-ROM, CD-G, photo CD, and CD-i discs cannot be played on this DVD player.*

Questions?

Our Award-Winning Customer Service Professionals are Ready to Help!

STOP DO NOT RETURN THIS PRODUCT TO THE STORE!

1 Call Us! For Fast, Friendly Service — 1-800-736-7679

2 E-Mail Us! For a Prompt Reply — customerservice@govideo.com

3 Or Check Our Website! For the Latest FAQs — www.govideo.com

Thank You!

:: Basic Controls

Two Decks, One Set of Controls!

DVD Key – Press to control the DVD (All deck control keys will operate the DVD)
VCR Key – Press to control the VCR (All deck control keys will operate the VCR)
TV Key – Press to control your TV (Certain keys will operate your TV)
TV View Key – Press to change your on-screen view (Each press will select a different input source - from DVD to VCR to TV to Line 1 to Line 2

:: Basic Disc Playback

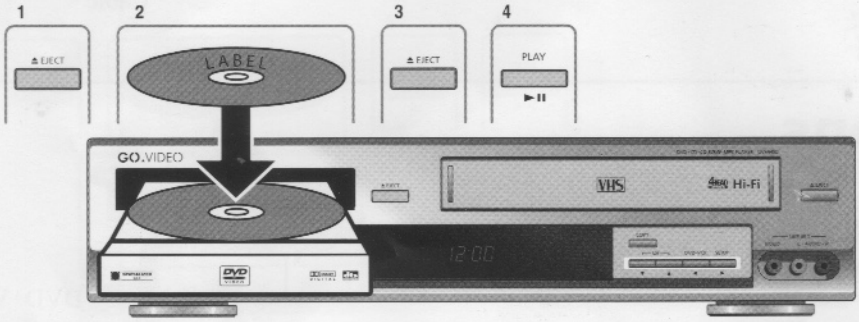

To Play a DVD, CD or VCD

1 Press EJECT on the remote control or front panel to open the disc drawer. The DVD+VCR will power on automatically when you open the disc drawer.
2 Place the disc in the drawer with the label side facing up. If the disc has two sides, place the disc with the desired side facing up.
3 Press EJECT again to close the disc drawer.
4 Press PLAY/PAUSE ►/II to begin playback. Many discs will begin playback automatically when the disc drawer closes.

Note

- *If the DVD has a disc menu, or more than one title, the disc menu may appear. If so, press ▲/▼ and ◄/► to highlight menu items, then press SETUP/ENTER to make selections.*

:: Basic VCR Playback

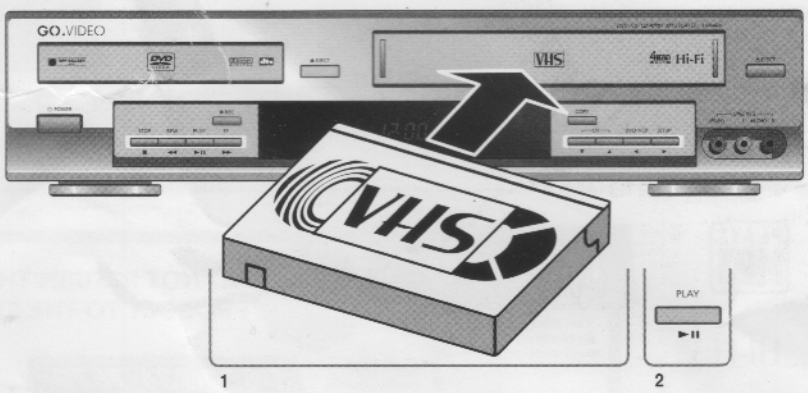

To Play a VHS Tape

1 Insert a VHS or S-VHS tape into the VCR deck. The DVD+VCR will power on automatically when you insert the tape.
2 Press PLAY/PAUSE ►/II to begin playback.

Note

- *If the tape is missing the record safety tab and Auto Play is turned on, the tape will begin playing automatically.*

©2003 GoVideo All rights reserved.